


Harmony Easy XA2

Ø22 mm pushbuttons, switches, and pilot lights

Cost-effective, reliable, and ergonomic dialog solution

Harmony™ Easy XA2 Ø 22 mm plastic pushbuttons, switches, and pilot lights address the challenges faced by new economies: fit for purpose at affordable prices with no compromise on ease of use, robustness, and availability ... the core values supported by a worldwide leader in automation.

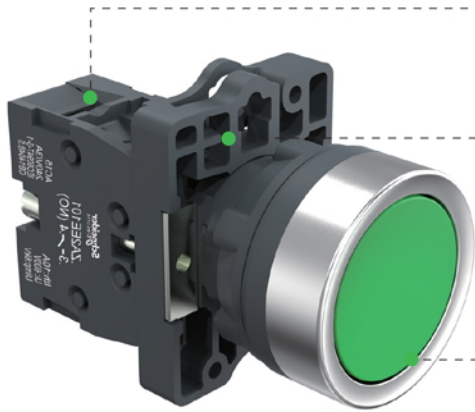

Product Overview

- > Functions: PB, SS, ES, KS, IPB, PL
- > Module structure, more contact block can be added

Key features

- > Mechanical durability:
 - PB/IPB: 1.5million
 - SS/KSS: 0.3million
 - ES: 0.1 million
- > Certification: CCC

Robustness

- > Conforming with the most demanding international standards • Tested and certified performance
- > Excellent resistance to mechanical shock and vibration
- > Supports extended temperature range from -40 °C to +70 °C
- > Degree of protection: IP65 for PB, IP54 for others

Selection Guide

Harmony Easy XA2 Ø22mm pushbuttons, switches, and pilot lights

Product	Feature	Reference	Product Discription (*)	Product	Feature	Reference	Product Discription (*)
Push button (Spring return)	1NO	XA2EA•1	1-○ 3-● 4-● 5-● 6-●	Key selector switch	1NO	XA2EG21	∇
	1NC	XA2EA•2	6-●		2NO	XA2EG•3	4-∇ 6-∇ 7-∇ 3-∇ 0-∇
Push button with marked head (Spring return)	1NO	XA2EA33•1	1-● 4-⊕ 5-⊖	Contact block	1NO	ZA2EE101	
	1NC	XA2EA43•2	2-● 4-●		1NC	ZA2EE102	
Push button (Mushroom head Dia 40)	Ø40 1NO	XA2EC•1	2-● 3-● 5-●	Flush, IPB	~24V(50/60 Hz) 1NO	XA2EW3•B1	1-○ 3-● 4-● 5-● 6-●
	Ø40 1NC	XA2EC•2	4-●		~220V (50/60 Hz) 1NO	XA2EW3•M1	1-○ 3-● 4-● 5-● 6-●
	Ø60 1NO	XA2ER•1	2-●		~380V (50/60 Hz) 1NO	XA2EW3•Q1	1-○ 3-● 4-● 5-● 6-●
Push button (Push-push)	1NO	XA2EH0•1	1-○ 3-● 4-● 5-● 6-●	Pilot Light	~24V(50/60 Hz) LED	XA2EVB•LC	1-○ 3-● 4-● 5-● 6-● 8-●
	1NC	XA2EH0•2	4-●		~110V (50/60 Hz) LED	XA2EVF•LC	1-○ 3-● 4-● 5-● 6-● 8-●
mergency switching off	Ø40 Push pull 1NC	XA2ET42	●		~110V LED	XA2EVD•LC	1-○ 3-● 4-● 5-● 6-● 8-●
	Ø30 Turn to release 1NC	XA2ES442	●		~220V(50/60 Hz) LED	XA2EVM1LC	1-○ 3-● 4-● 5-● 6-● 8-●
	Ø40 Turn to release 1NC	XA2ES542	●		~220V LED	XA2EVM•LC	1-○ 3-● 4-● 5-● 6-● 8-●
	Ø60 Turn to release 1NC	XA2ES642	●		~380V(50/60 Hz) LED	XA2EVQ•LC	1-○ 3-● 4-● 5-● 6-● 8-●
	Ø30 Turn to release 1NC	XA2ES442	●				
Selector switch (Short handle)	1NO	XA2ED•1	2-∇ 4-∇	Selector switch (Long handle)	1NO	XA2EJ21	∇
	1NO + 1NC	XA2ED25	∇		1NO + 1NC	XA2EJ25	∇
	1NO	XA2ED•3	3-∇ 5-∇		2NO	XA2EJ•3	3-∇ 5-∇